

## Procedure to reset Engine Control Module (ECM / ECU)

**CAUTION: Always wear safety glasses when disconnecting or reconnecting battery cables.**

- 1) While engine is turned off, disconnect "NEGATIVE (-)" battery cable from the battery.
- 2) Turn "ON" lights to drain electricity from capacitors in system.
- 3) Wait at least 15 minutes.
- 4) Turn "OFF" lights and reconnect battery cable.
- 5) Start engine and idle in "PARK" while slowly vary throttle positions between IDLE up to 2000 RPM.

If engine is running normal proceed to put car into DRIVE, then drive slowly while varying RPM for a few minutes. Once engine is running normally, proceed to drive car.